


EE-AL-002-SIT


Wireless Site Alarm Assembly Guide

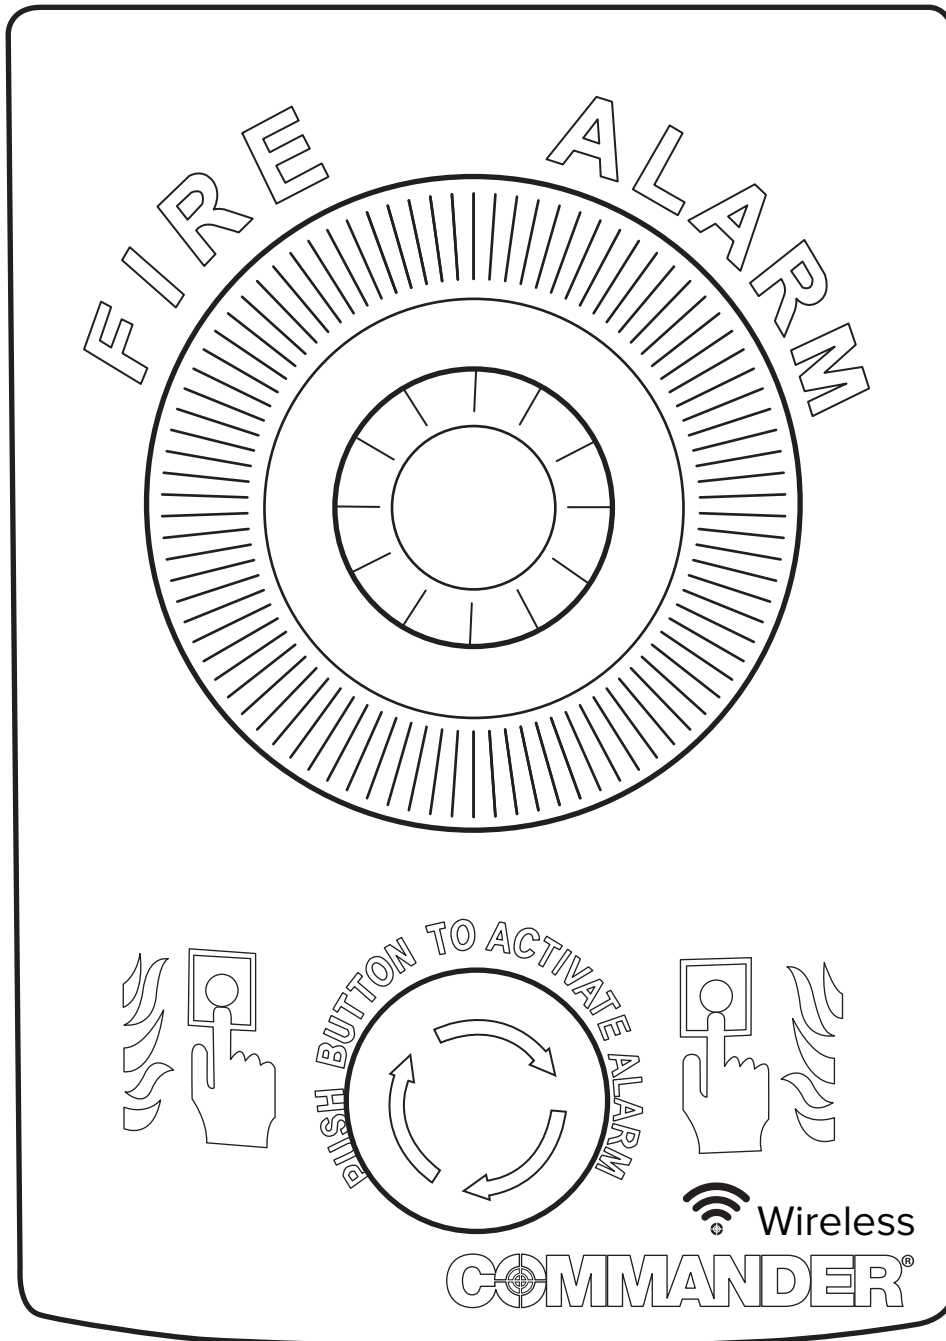

View instruction
manual video here.


CheckFire.
GROUP

Marking the master alarm

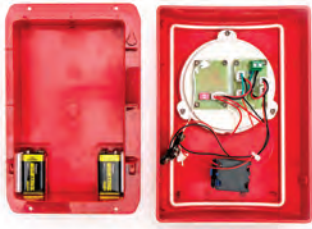

1. Open the cases of the alarms you wish to connect.
2. Any alarm being used as the master should be marked as such, if the master alarm is misplaced during pairing, then the process will need to be restarted.

Switching the alarm

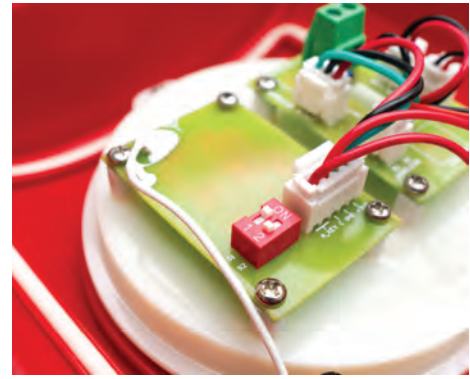


3. With the batteries unplugged turn the "S1" switch on the master alarm to "ON"

Installing batteries




4. Install the batteries into the master alarm.
5. The master alarm will then start to beep intermittently, this is a sign that the pairing function is in process.

Completing the pairing process

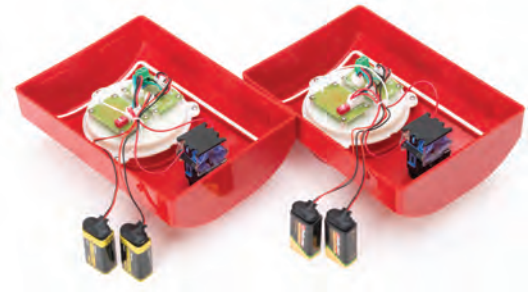

6. Only switch the position of "S1" on the master alarm. Install the batteries into other units you wish to connect, the unit will start to beep intermittently. This indicates the pairing process is complete.

Remove batteries

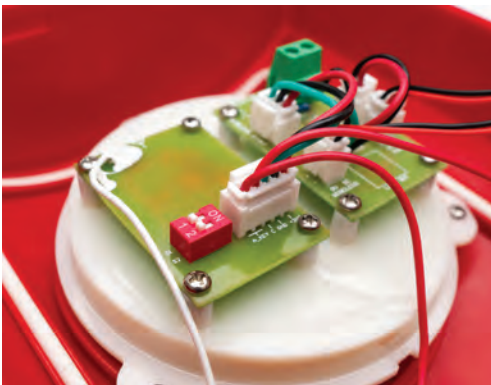

7. Once all units have been paired, remove the batteries from every alarm and change the "S1" position on the master alarm to "Off".

Finalising connection



8. Test the alarms by pressing the button, there will be a slight delay when the button is pressed.
9. If any units did not connect, follow the steps above with the unit. You do not need to repair the units that paired successfully.